

nickelodeon



vtech®

Instruction Manual

# Hover Spy Chase



 
**F.P.O.**



© 2024 Spin Master PAW Productions Inc. All rights reserved.  
PAW Patrol and all related titles, logos and characters are trademarks  
of Spin Master Ltd. Nickelodeon and all related titles and logos are  
trademarks of Viacom International Inc.

# INTRODUCTION

Thank you for purchasing the **VTech® Hover Spy Chase**. Patrol around with Super Spy Chase as he moves around, talking and avoiding obstacles.

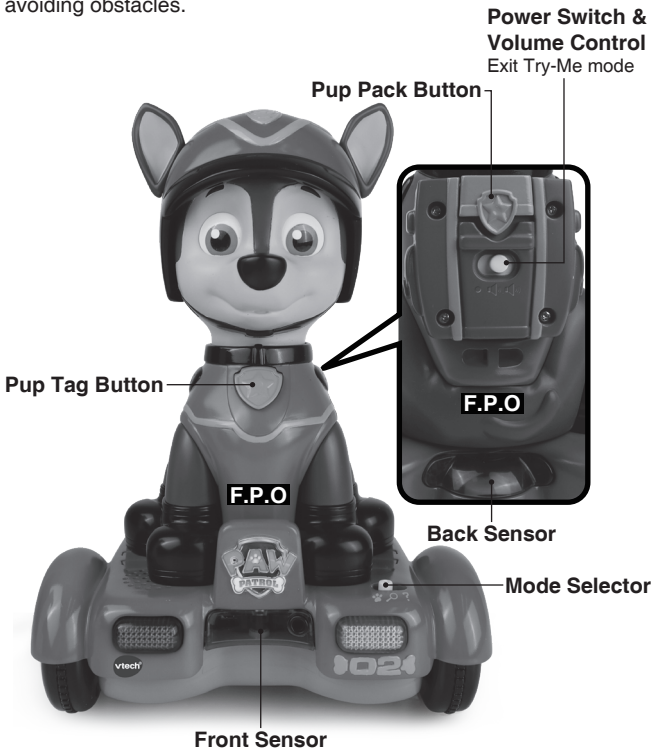

# INCLUDED IN THE PACKAGE

- VTech® Hover Spy Chase
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

 
## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## Unlock the Packaging Locks

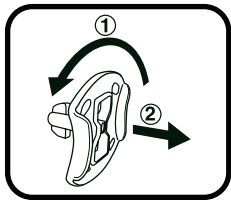


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks.



# IMPORTANT NOTES

 1. For optimal performance, please use the unit on a flat, smooth floor. It is advisable to play with the unit in a spacious indoor area.

**NOTE:** Don't put on high tables or high surfaces.

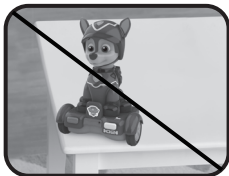

  2. For your child's safety, ensure that the wheels are kept away from clothing, body or hair.

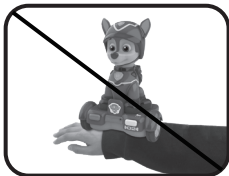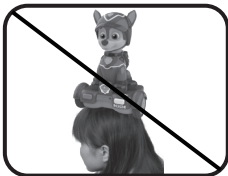

3. Avoid playing under direct sunlight as this may affect the sensors.

# GETTING STARTED



## WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

 


## ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the two battery covers located on the bottom of the unit, use a screwdriver to loosen the screws and then open the battery covers.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery boxes. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery covers and tighten the screws to secure.

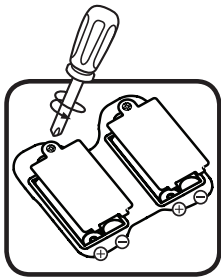

## ACTIVATE NORMAL PLAY MODE

This product is in Try-Me mode in the packaging.

To activate normal play mode: Slide the **Off/Low/High Volume Switch** to **Off**.

Then slide it to **Low** (🔊) or **High** (🔊🔊).



**NOTE:** Removing the batteries for approximately 5 seconds will also activate normal play mode. See Battery Removal and Installation instructions.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **IMPORTANT : INFORMATIONS CONCERNANT LES PILES**

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
### **PILES RECHARGEABLES :**

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

# PRODUCT FEATURES

## 1. Power Switch & Volume Control

To turn the unit **On**, slide the switch to the **Low** (🔊) or **High** (🔊) **Volume** position. To turn the unit **Off**, slide the switch to the **Off** (●) position.

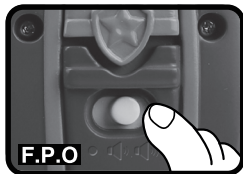

## 2. Mode Selector

Move the **Mode Selector** to select a mode of play. There are 3 modes to choose from.



## 3. Pup Pack Button

Press the **Pup Pack Button** to hear Chase activate his tools or answer questions.



## 4. Pup Tag Button

 
Press the **Pup Tag Button** to hear Chase calling the teammates answer questions.





## 5. Sensors

The **Sensors** on the front and back of the vehicle help Chase avoid obstacles and allow you to guide his movement. If you are having problems triggering the sensors, make sure the obstacles are placed directly in front of the sensors. Avoid direct sunlight as this may affect the **Sensors**.

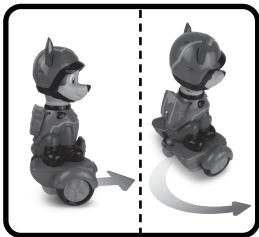

## 6. Automatic Shut-Off

To preserve battery life, **VTech® Hover Spy Chase** will automatically turn **Off** after several minutes without input.

**VTech® Hover Spy Chase** can be woken up again by pressing the **Pup Tag Button** or the **Pup Pack Button**.

**NOTE:** If the unit powers down or if the light fades out during play, please install a new set of batteries.

## ACTIVITIES

### 1. Free Play

Explore with Chase as he talks, zooms around and avoids obstacles. Trigger the **Sensors** to guide his movements. Press **Pup Pack Button** or **Pup Tag Button** to play fun phrases.

### 2. Hide And Seek

Find where Chase is hiding. Wait while Chase counts or plays music. After Chase finishes counting or when the music, press the **Pup Pack Button** or **Pup Tag Button** stops, find him and then...

### 3. Spy Time

Play I spy and press the **Pup Tag Button** or **Pup Pack Button** to answer questions.

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, replace with a new set of batteries.

## **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **Supplier's Declaration of Conformity**

### **47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5735  
Product Name: PAW Patrol Hover Spy Chase  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.  
CAN ICES-003(B)/NMB-003(B)

# CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to **[vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees)** for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***  
***vtech.com.au***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

