 


The Vtech logo consists of the word "vtech" in a bold, lowercase, sans-serif font, enclosed within a dark, rounded rectangular shape that has a slight gradient and a shadow effect.

Quick Start Guide

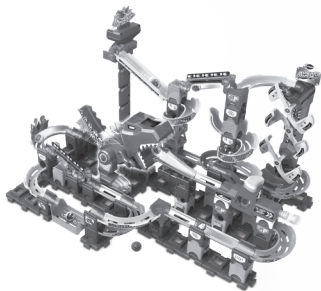

Marble Rush^{®/MD} T-Rex Dino Thrill Track Set^{™/MC}

We aim to reduce our environmental impact and have reduced the amount of paper used for our printed manuals. The full version of the manual is available online through the following link or by scanning the QR code.

For USA



vtechkids.com/guides

For Canada



vtechkids.ca/en/guides

For AUS/NZ

 


[vtech.com.au/support/
product_manuals](https://vtech.com.au/support/product_manuals)

Read our complete warranty policy online at
vtechkids.com/warranty vtechkids.ca/warranty

INTRODUCTION

Thank you for purchasing the **Marble Rush^{®/MD} T-Rex Dino Thrill Track Set^{™/MC}**. Get ready for a rush of non-stop action! Build thrilling courses, send the marbles into motion and compete with family and friends through exciting challenges complete with lights and sounds. Please refer to the Color Manual for detailed building steps.

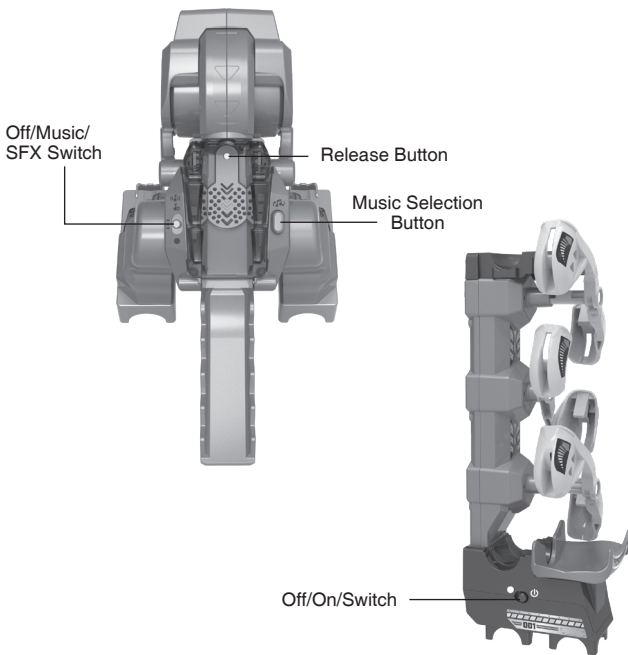

INCLUDED IN THE PACKAGE

- **Marble Rush^{®/MD} T-Rex Dino Thrill Track Set^{TM/MC}**
- 109 building pieces
- 5 Magic Stunt Marbles (metal core)
- 5 marbles
- Sticker sheet
- Color manual
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce guide de démarrage rapide car il comporte des informations importantes.

WARNING

Do not aim at eyes or face.

WARNING

Do not discharge any object other than the projectile provided with this toy.

ATTENTION

Ne viser ni les yeux ni le visage.

ATTENTION

Ne pas utiliser d'autres projectiles que ceux fournis avec ce jouet.



WARNING:

 
CHOKING HAZARD-Toy contains small parts and small balls.

Not for children under 3yrs.

INSTRUCTIONS


T-Rex Battery Removal and Installation

1. Make sure the T-Rex is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

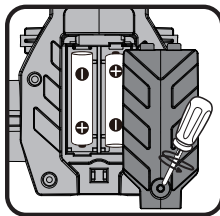

Elevator Battery Removal and Installation

 1. Make sure the Elevator is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.

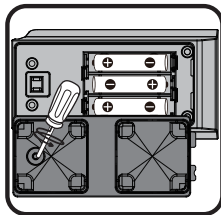

3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

 
RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.


ASSEMBLY INSTRUCTIONS

Adult assembly required. For your child's safety, do not let your child play with this product until it is fully assembled.

1. Align the dinosaur's legs with the buckle as shown in the picture and snap them in.

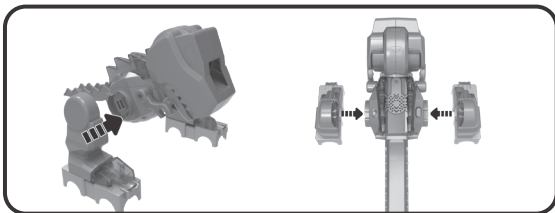





 
2. Align both ends of the transparent magnetic cable with the two buckles and snap them in place. A snapping sound will indicate they are connected.

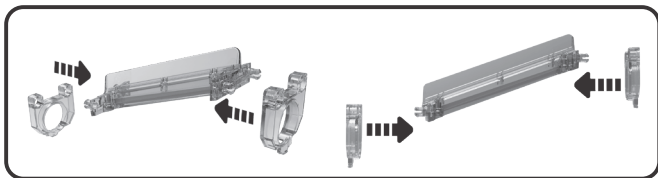

LABEL APPLICATION

     Please securely stick the labels to the playset as indicated below:

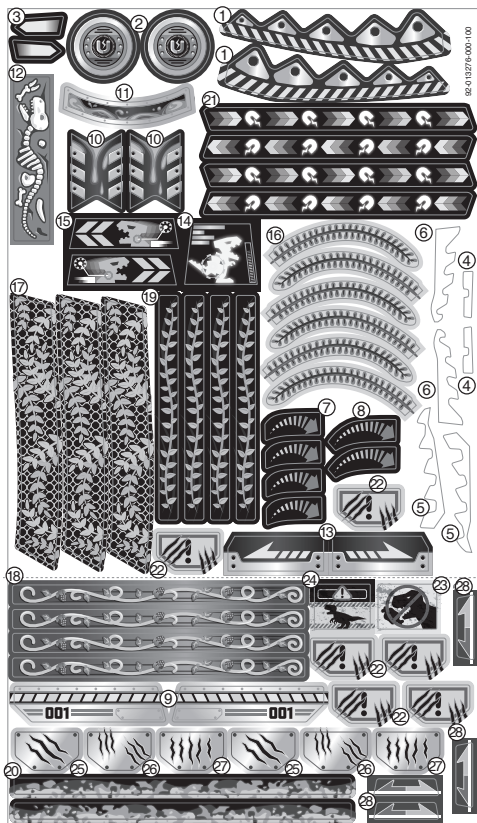


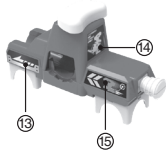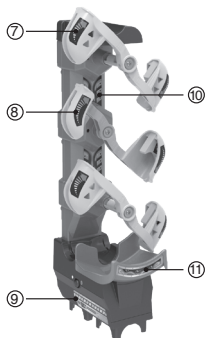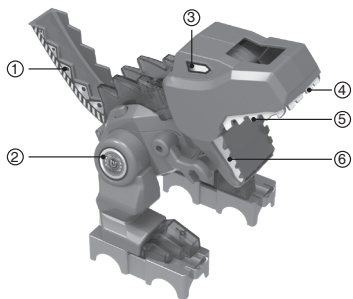

PRODUCT FEATURES


1. Off/Music/SFX Switch ● 🎵 🎶

 Slide the switch all the way to 🎶 to turn on both music and sound effects (SFX). The middle position 🎵 plays SFX with no background music. Slide the selector all the way to ● to turn off the **T-Rex**.

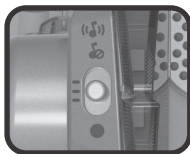


2. Music Selection Button 🎶

 Press the **Music Selection Button** to cycle through the background music options.

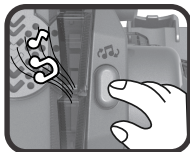


3. Release Button

 You may press this button to release the marbles stored in the Dino's tail.

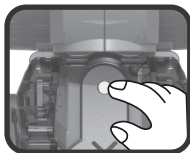

4. Chomping T-Rex & Marbles

 When Magic Stunt marbles go into the Chomping T-Rex's mouth and are detected by the magnetic trigger, the Chomping T-Rex's mouth will snap and its body will straighten while playing a dino sound effect. Any marbles in the Chomping T-Rex will roll down the tail. When standard plastic marbles go into the Chomping T-Rex's mouth, the Chomping T-Rex will not snap down, only flash a yellow light and play a sound effect.

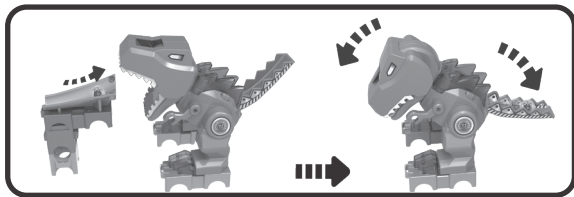

5. Automatic Shut-Off

To preserve battery life, the **Marble Rush^{®/MD} T-Rex Dino Thrill Track Set^{™/MC}** will automatically power-down after several minutes without input. The Chomping T-Rex can be turned on again by sliding the **Off/Music/SFX Switch** to the show the graphic icon instead of mention left or right side. The unit will automatically turn off when the batteries are very low.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5716
Product Name: Marble Rush® T-Rex Dino Thrill Track Set™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.