


vtech[®]

Instruction Manual


SUPER SOUND **KARAOKE**^{TM/MC}




ITM. / ART. 1785056(English)
2785056(French)
91-004280-007 

INTRODUCTION

Thank you for purchasing the **SuperSound Karaoke™**. Bring the party wherever you go with this portable **Bluetooth®** speaker and corded microphones. The multicoloured party light adds to the atmosphere, and sound controls allow you to adjust the volume, create an echo and other voice-changing effects. Warm up your singing voice with the built-in vocal exercises. Ready to party? Turn it up!

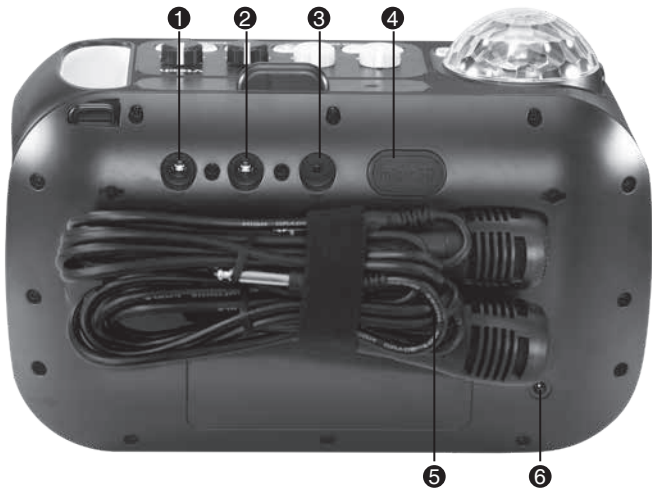

- ① 6.35mm Mic 2 Jack
- ② 6.35mm Mic 1 Jack
- ③ Line-in Jack
- ④ microSD Card Slot
- ⑤ 2 Corded Microphones (with 6.5-foot cord)
- ⑥ AC Adapter Jack

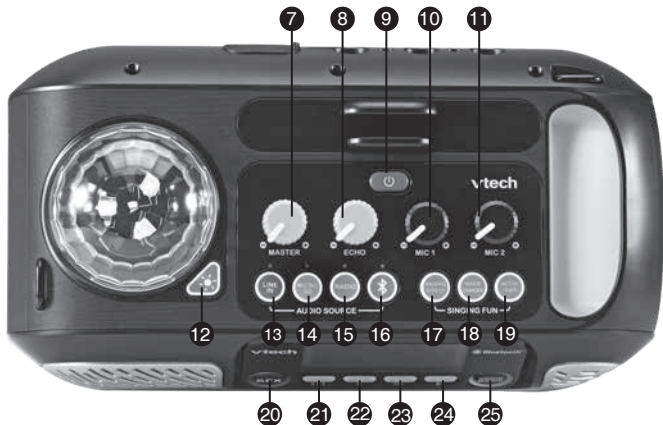

- | | |
|---|-------------------------|
| 7 Master Volume Dial | 20 SFX Button |
| 8 Echo Dial | 21 Mode Button |
| 9 Power Button | 22 Back Button |
| 10 Mic 1 Volume Dial | 23 Play/Pause/OK Button |
| 11 Mic 2 Volume Dial | 24 Next Button |
| 12 Party Light On/Off Button | 25 Voice Magic Button |
| 13 Line-in Button | |
| 14 microSD Button | |
| 15 Radio Button | |
| 16 <i>Bluetooth</i> [®] Button | |
| 17 Singing Effect Button | |
| 18 Voice Changer Button | |
| 19 Activities Button | |

Cable, music player,
microSD card not included.

INCLUDED IN THE PACKAGE

- SuperSound Karaoke™
- 2 Microphones
- Power Adapter
- Instruction Manual

NOTE

Please save this Instruction Manual as it contains important information.

NOTE

Before first use, we recommend ensuring that the volume is lowered.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.


NOTE

Avant la première utilisation, nous vous recommandons de vous assurer que le volume sonore principal est réglé vers le bas.

GETTING STARTED

Battery Installation

1. Before replacing the batteries, make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 6 new AA (AM-3/LR6) batteries (included) following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover.

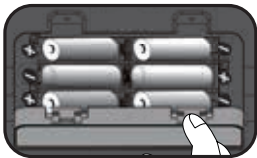

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove exhausted batteries from the product.
- For recycling and disposal of batteries to protect the environment, please check the internet or your local phone directory for local recycling centers and / or follow local government regulations.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the product before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

POWER ADAPTER CONNECTION

- Make sure the unit is turned **Off**.
- Locate the **AC Adapter Jack** on the back of the unit.
- Connect the included AC adapter to the **AC Adapter Jack**.
- Plug the adapter into a power outlet.
- Press the **Power Button** to turn the system **On**.

NOTE

If the unit will not be used for an extended period of time, unplug the adapter.

AC Adapter Safety

Not suitable for children under 3 years. Misuse of AC adapter can cause electric shock.

- Connection of the AC adapter to the wall outlet should be performed only by an adult.
- The AC adapter is not intended to be used as a toy, and the use of the AC adapter shall be under the full supervision of parents.
- As with all electrical products, precautions should be observed during handling and use to prevent electrical shock.
- The AC adapter may become warm during normal use. Always allow adequate ventilation and use care when handling the AC adapter.
- Do not connect or disconnect with wet hands.
- The AC adapter should be periodically examined for conditions that may result in the risk of fire, electrical shock or injury to persons, such as damage to the cord, plug, blades, housing or other parts, and in the event of such conditions, the cord must not be used until the damage is repaired.

The AC adapter cannot be replaced; if the cord is damaged, dispose of the AC adapter in accordance with your local electrical product recycling regulations.

Unplug the AC Adapter if any of the following conditions exist:

- The AC adapter, plug or USB cord has become frayed or damaged.
- The AC adapter is exposed to rain, liquid or excessive moisture.
- The AC adapter enclosure has become damaged.
- You suspect the AC adapter needs service or repair.

To Clean AC Adapter

Disconnect it from the wall and clean with a slightly damp cloth. Do not immerse in water or use soap or other chemicals. Allow to dry before reusing. Do not connect to the AC outlet if wet or damaged.

PRODUCT FEATURES

1. Power Button

Press the **Power Button** to turn the unit **On**. Press it again to turn the unit **Off**.



2. Line-in Jack

Connect an external music player here using a 3.5mm jack audio cable (cable and music player not included).



3. microSD Card Slot

Insert a microSD card (we recommend 8 or 16 GB) in this slot and push gently until you hear a click sound (microSD card not included).



4. AC Adapter

Connect the **SuperSound Karaoke™** to the included AC power adapter.



5. Mic 1 and Mic 2 Jack

Plug the **Microphones** into the jacks to connect.



6. Party Light On/Off Button

Press this button to switch the party light **On** and **Off**.



BUTTONS AND FEATURES

1. Volume Control

Master Volume Dial, Mic 1 Volume Dial, Mic 2 Volume Dial, Echo Dial:

Turn clockwise to increase the volume, counter-clockwise to decrease.



2. Line-in Button

Press the **Line-in Button** to listen to music from your connected external music player. (Music player not included.)

Note: All playback controls (including play/pause, back, next) can only be controlled by the external music player when an external music source is connected via Line-in. The Voice Magic feature is unavailable for Line-in.



3. microSD Button

Press the **microSD Button** to listen to MP3 music files from the microSD card. Press the **Mode Button** to shuffle or repeat the music. (microSD card not included.)



4. Radio Button

Press this button to listen to FM radio. Change the station by pressing the **Back Button** or **Next Button**. If the signal is weak, please try another station or move the SuperSound Karaoke™ to a different area.



5. Bluetooth® Button

Press this button to hear music from a **Bluetooth®** connected device. Select "Vtech SuperSound Karaoke" from your **Bluetooth®** device, then input the PIN



displayed on your SuperSound Karaoke™. Press the **Mode Button**, **Back Button** or **Next Button** if you would like to turn the PIN off. If there are any connection problems, please reset the *Bluetooth*® settings on your device.

6. Singing Effect Button

Press the **Singing Effect Button** to apply special effects to your voice.



7. Voice Changer Button

Press the **Voice Changer Button** to apply one of four voice-changing effects to your voice.



8. Activities Button

Press the **Activities Button** to enter the Activities menu. Use the **Left/Right Buttons** to select an activity, then press the **OK Button** to confirm.



Activity 1: Singing Warm-Up

First, listen to the built-in instructor's voice, and then repeat. You can press the **Back/Next Button** to select a different scale. Press the **Mode Button** if you would like to quit the activity.



Activity 2: Sing As You Like

Select the background music you would like, and then sing along to it.



Activity 3: Singing Concert

Sing and hear an audience cheer you on!



9. SFX Button

Press the **SFX Button** to play random fun sound effects.



10. Mode Button

When playing MP3 music files from a microSD card, press this button to choose Shuffle, Repeat One, or Repeat All mode. Press this button during other activities to quit the activity.



11. Back Button, Play/Pause/OK Button and Next Button

Press these buttons to select and control songs and activities.



12. Voice Magic Button

Press the **Voice Magic Button** to reduce or remove the main vocal track of the song you're listening to.

Note: This feature is not available during Line-in mode. This feature may not work with every song, but works best for studio recorded songs.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth. Do not use soap, detergent or other chemicals.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

If there is a pairing problem with your *Bluetooth*[®] device, please follow these steps:

1. On your *Bluetooth*[®] enabled device, please go to *Bluetooth*[®] settings. If “SuperSound Karaoke” is found in your list of connected, paired or saved devices, please “forget” or “unpair” it.
2. Disable and enable *Bluetooth*[®] or restart your device.
3. Turn the unit **Off** and **On** and repeat the pairing process.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, insert a new set of batteries

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Bluetooth Statement

The *Bluetooth*[®] word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by **VTech**[®] is under license. Other trademarks and trade names are those of their respective owners.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5474
Product Name: SuperSound Karaoke™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

Costco Wholesale Canada Ltd.*
415 W. Hunt Club Road
Ottawa, Ontario,
K2E 1C5, Canada
1-800-463-3783
www.costco.ca
*faisant affaire au Québec sous
le nom Les Entrepôts Costco

MADE IN CHINA / FABRIQUÉ EN CHINE

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty




© 2022 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-004280-007 

vtech[®]

Manuel d'utilisation


SUPER SOUND **KARAOKE**^{TM/MC}




ITM. / ART. 1785056(English)
2785056(French)
91-004280-007 

INTRODUCTION

Que la fête commence avec le **SuperSound Karoké[™] MC de VTech[™]** ! Grâce à cette boom box ultra complète, tu vas pouvoir écouter tes chansons préférées sur un haut-parleur de 40 watts, chanter avec un micro, ajouter des effets sonores, de l'écho, déformer ta voix ou encore t'entraîner à chanter des gammes comme dans un véritable cours de chant ! Tu peux aussi utiliser la fonction Magic Voice pour supprimer la voix de l'interprète d'origine d'une chanson et chanter à sa place ! Alors, invite tes amis, n'oublie pas d'allumer la boule disco et la fête pourra commencer !

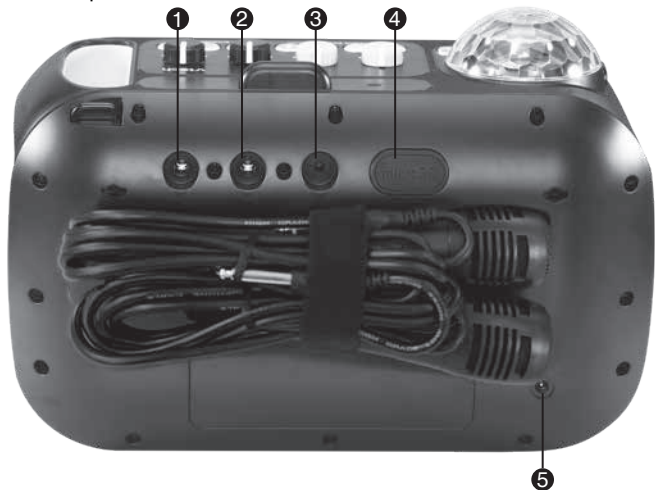

- ① Port audio Jack 6,35 mm pour le micro 2 (non inclus)
- ② Port audio Jack 6,35 mm pour le micro 1 (inclus)
- ③ Port audio Jack 3 mm pour brancher un lecteur mp3 (non inclus)
- ④ Emplacement pour carte micro-SD (non incluse)
- ⑤ Port pour branchement de transformateur secteur (non inclus)

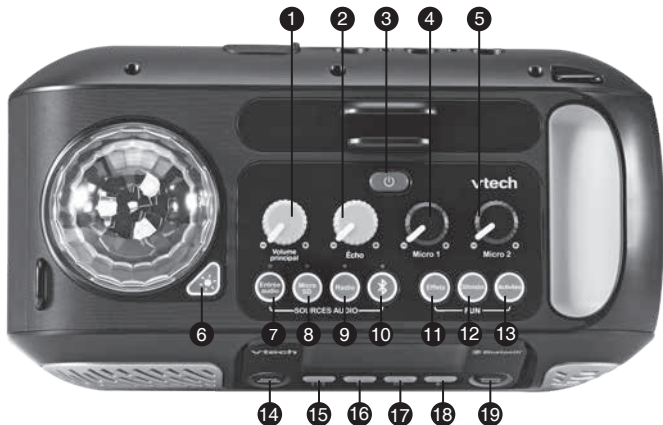

- 1 Contrôleur du volume sonore principal
- 2 Contrôleur de l'écho
- 3 Bouton Marche/Arrêt
- 4 Contrôleur du volume sonore du micro 1
- 5 Contrôleur du volume sonore du micro 2
- 6 Bouton Marche/Arrêt de la boule disco
- 7 Bouton pour sélectionner l'entrée audio du lecteur mp3 (non inclus)
- 8 Bouton pour sélectionner la carte micro-SD
- 9 Bouton pour sélectionner la radio FM
- 10 Bouton de la connexion **Bluetooth®**
- 11 Bouton des effets sonores
- 12 Bouton de la déformation de la voix
- 13 Bouton des activités
- 14 Boutons des effets sonores
- 15 Bouton pour le mode Lecture de musique
- 16 Flèche de piste précédente/Flèche de gauche
- 17 Bouton Lecture/Pause/OK
- 18 Flèche de piste suivante/Flèche de droite
- 19 Bouton Magic Voice

CONTENU DE LA BOÎTE

- **SuperSound Karaoke^{MC}**
- 2 micro
- Un manuel d'utilisation

NOTES :

- Il est conseillé de conserver ce manuel d'utilisation car il comporte des informations importantes.
- Avant la première utilisation, nous vous recommandons de vous assurer que le volume sonore principal est réglé vers le bas.


ALIMENTATION

Pour sortir du mode Démonstration, insérer le micro dans un des ports Jack 6,35 mm.

Installation des piles

SuperSound Karaoke^{MC} fonctionne avec 6 piles LR6/AA ou un adaptateur/transformateur CA / CC 12 V/2 A ou supérieur avec une sortie DC 5,5mm/2,5mm.

1. Avant d'insérer les piles, s'assurer que l'appareil est éteint.
2. Le couvercle du compartiment à piles se trouve sur la partie inférieure de l'appareil. Utiliser un tournevis pour desserrer la vis.
3. Si des piles usagées sont présentes dans l'appareil, retirer ces piles en tirant sur l'une des extrémités.
4. Insérer 6 piles LR6/AA en respectant le schéma qui se trouve dans le compartiment à piles. Pour de meilleures performances, il est recommandé d'utiliser des piles alcalines ou des piles rechargeables Ni-MH pleinement rechargées.
5. Refermer soigneusement le couvercle du compartiment et s'assurer que la vis est bien serrée.

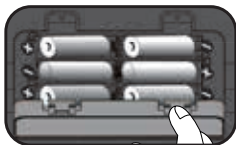

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester l'appareil en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés de l'appareil.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES :

- Enlever, lorsque c'est possible, les accumulateurs de l'appareil pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

NOTES :

Débrancher le transformateur du secteur et du produit en cas de non-utilisation prolongée.

Si le SuperSound Karaoké^{MC} ne fonctionne pas ou si le son est vraiment très faible, cela peut provenir d'un mauvais branchement.

Éteindre l'appareil et débrancher le transformateur pendant quelques secondes. Puis, rebrancher le transformateur et remettre l'appareil en marche. Si le problème persiste, remplacer le transformateur car il doit être endommagé.

INFORMATIONS DE SÉCURITÉ LORS DE L'UTILISATION D'UNE ALIMENTATION ÉLECTRIQUE

Nous recommandons l'utilisation d'une alimentation électrique adaptateur/transformateur CA / CC 12 V/2 A ou supérieur avec une sortie DC 5,5mm/2,5mm.

- Ne jamais exposer à l'humidité un produit branché sur le secteur.
- Vérifier régulièrement l'état de la source d'alimentation (fiches de raccordement, boîtier, prise ou toute autre pièce). Ne pas utiliser une source d'alimentation endommagée pour éviter tout risque d'incendie, de choc électrique ou de dommage corporel.

Sécurité de l'adaptateur CA

Ne convient pas aux enfants de moins de 3 ans. Une mauvaise utilisation de l'adaptateur CA peut provoquer un choc électrique.

- La connexion de l'adaptateur secteur à la prise murale doit être effectuée uniquement par un adulte.
- L'adaptateur secteur n'est pas destiné à être utilisé comme un jouet. L'utilisation de l'adaptateur CA doit se faire sous l'entière surveillance des parents.
- Comme pour tous les produits électriques, des précautions doivent être prises lors de la manipulation et de l'utilisation afin d'éviter tout risque d'électrocution.

- L'adaptateur CA peut chauffer lors d'une utilisation normale. Laissez toujours une ventilation adéquate et soyez prudent lorsque vous manipulez l'adaptateur CA.
- Ne pas le brancher ou le débrancher avec des mains mouillées.
- L'adaptateur CA doit être régulièrement examiné pour vérifier qu'il ne présente pas de conditions susceptibles d'entraîner un risque d'incendie, de brûlure ou de blessure tels que des dommages au cordon, à la fiche, aux lames, au boîtier ou à d'autres pièces. Dans ce cas, le cordon ne doit pas être utilisé jusqu'à ce que le dommage soit réparé.
- L'adaptateur secteur ne peut pas être remplacé; si le cordon est endommagé, mettez l'adaptateur secteur au rebut conformément à la législation en vigueur.

Débranchez l'adaptateur secteur dans les conditions suivantes :

- L'adaptateur secteur, la fiche ou le cordon USB sont effilochés ou endommagés.
- L'adaptateur CA est exposé à la pluie, à un liquide ou à une humidité excessive.
- Le boîtier de l'adaptateur CA est endommagé.
- Vous pensez que l'adaptateur CA a besoin d'être entretenu ou réparé.

Pour nettoyer l'adaptateur CA

Débranchez-le et nettoyez-le avec un chiffon légèrement humide. Ne l'immergez pas dans l'eau et n'utilisez pas de savon ou de produits chimiques.

Laissez-le sécher avant de le réutiliser. Ne pas brancher l'appareil à la prise secteur s'il est mouillé ou endommagé.
endommagé.

FONCTIONNALITÉS

1. Bouton Marche/Arrêt

Appuyer sur le bouton Marche/Arrêt pour allumer la boom box. Appuyer une nouvelle fois sur ce bouton pour l'éteindre.



2. Entrée audio

Brancher un lecteur mp3 (non inclus) à l'aide d'un câble audio Jack 3,5 mm (non inclus).



3. Carte micro-SD

Insérer une carte micro-SD (d'une capacité de 8 ou 16 Go) dans cette fente puis appuyer doucement pour bien l'insérer dans son emplacement (carte micro-SD non incluse).



4. Transformateur secteur

L'appareil offre la possibilité de brancher un adaptateur/transformateur CA / CC 12 V/2 A ou supérieur avec une sortie DC 5,5mm/2,5mm (non inclus).



5. Ports pour micro

Brancher le micro inclus dans le port 6,35 mm prévu à cet effet. Un second micro peut être branché pour chanter en duo (micro supplémentaire non inclus).



6. Bouton Marche/Arrêt de la boule disco

Appuyer sur ce bouton pour mettre en marche ou arrêter la boule disco.



BOUTONS ET ACTIVITÉS

1. Volume sonore

Différents contrôleurs sont disponibles : volume principal, écho, micro 1 et micro 2. Tourner les contrôleurs dans le sens des aiguilles d'une montre pour augmenter le volume sonore et dans le sens inverse pour le réduire.



2. Bouton Entrée audio

Appuyer sur ce bouton pour écouter de la musique à partir d'un lecteur mp3 branché à l'aide d'un câble audio Jack 3,5 mm (lecteur et câble non inclus). La fonction Magic Voice n'est pas accessible dans ce mode.



3. Bouton Carte micro-SD

Appuyer sur ce bouton pour écouter de la musique au format mp3 disponible sur la carte micro-SD (non incluse). Appuyer sur le bouton Mode pour écouter en mode aléatoire ou pour répéter une chanson.



4. Bouton Radio

Appuyer sur ce bouton pour écouter la radio FM. Pour changer de station, utiliser les flèches de droite et de gauche. Si la réception n'est pas bonne, essayer de changer de station ou de positionner la boom box dans un autre endroit.



5. Bouton **Bluetooth®**

Appuyer sur ce bouton pour écouter de la musique grâce à la connexion **Bluetooth®**. Sélectionner « VTech SuperSound Karaké » sur votre appareil, puis entrer le code qui s'affiche sur l'écran LCD de la boom box. Appuyer sur le bouton Mode ou les flèches pour désactiver le code PIN en cas de problème de connexion **Bluetooth®**. En cas de problème de jumelage avec votre appareil **Bluetooth®**, merci de vous rendre dans les paramètres de votre appareil. Si « VTech SuperSound Karaké » se trouve dans la liste des appareils connectés, jumelés ou enregistrés, veuillez '« oublier »'. Ensuite, désactivez et réactivez le **Bluetooth®**, ou redémarrez votre appareil. Enfin, éteignez puis rallumez votre SuperSound Karaké. Vous pouvez maintenant recommencer le processus de jumelage **Bluetooth®**.



6. Bouton Effets sonores

Appuyer sur ce bouton pour ajouter des effets sonores.



7. Bouton Déformation

Appuyer sur ce bouton pour déformer la voix de 4 façons différentes.



8. Bouton Activités

Appuyer sur le bouton Activités pour accéder au menu. Utiliser les flèches pour choisir une activité puis le bouton OK pour confirmer.



Activité 1 : Échauffement vocal

Pour commencer, écouter la gamme chantée puis essayer de la reproduire par la suite. Utiliser les flèches pour changer de tonalité. Appuyer sur le bouton Mode pour quitter l'activité.



Activité 2 : Mode Chanson

Choisir une mélodie puis il ne reste plus qu'à inventer les paroles !



Activité 3 : Mode Concert

Chanter a cappella sous les encouragements et applaudissements du public !



9. Effets sonores

Appuyer sur ce bouton pour ajouter des effets sonores.



10. Bouton Mode

Lorsque la musique provient d'une carte micro-SD, appuyer sur ce bouton pour passer de la lecture aléatoire à la répétition d'une piste. Appuyer sur ce bouton dans les activités pour stopper une activité.



11. Bouton de piste précédente, Lecture/Pause bouton OK et bouton de piste suivante

Appuyer sur ces boutons pour sélectionner une chanson ou une activité et contrôler les chansons écoutées.



12. Bouton Magic Voice

Appuyer sur ce bouton pour atténuer la voix de l'interprète d'origine d'une chanson.

* Cette fonction n'est pas accessible lorsque le lecteur mp3 est branché grâce à un câble audio Jack.

De plus, cette fonction est compatible avec la plupart des chansons au format mp3 enregistrées en studio. **VTech**^{MD} ne peut pas garantir cette fonctionnalité avec toutes les chansons mp3 car elle dépend des conditions d'enregistrement des chansons.



ENTRETIEN

1. Pour nettoyer l'appareil, utiliser un linge légèrement humide. Ne pas utiliser de solvants ni de produits corrosifs.
2. Éviter toute exposition prolongée de l'appareil au soleil ou à toute autre source de chaleur.
3. Retirer les piles lorsque l'appareil n'est pas utilisé pendant une longue période.
4. Cet appareil est fabriqué avec des matériaux résistants. Néanmoins, lui éviter les chocs contre des surfaces dures et ne pas l'exposer à la moisissure et à l'eau.

ASSISTANCE

Si l'appareil cesse de fonctionner ou ne s'allume plus, essayez les étapes suivantes :

1. Éteindre l'appareil.
2. Enlever les piles pour éteindre la source d'alimentation.
3. Laisser l'appareil quelques minutes puis réinsérer les piles.
4. Rallumer l'appareil. Celui-ci devrait fonctionner à nouveau.
5. Si l'appareil ne fonctionne toujours pas, remplacer les piles par des piles neuves.

Besoin d'aide sur nos produits ?

Pour le Canada : www.vtechkids.ca/fr, rubrique Politiques

Informations Bluetooth®

Le terme et les logos **Bluetooth®** sont des marques déposées appartenant à Bluetooth SIG, Inc. et tout usage de ces marques par **VTech^{MD}** s'inscrit dans le cadre d'une licence. Les autres marques commerciales et noms de marques appartiennent à leurs propriétaires respectifs.

Bande de fréquence FM Radio : 87.5 MHz - 108 MHz

Bande de fréquence **Bluetooth®** : de 2 402 MHz à 2 480 MHz

Puissance maximale de l'émetteur **Bluetooth®** : 2 dBm (1,6 mW)

Costco Wholesale Canada Ltd.*

415 W. Hunt Club Road

Ottawa, Ontario,

K2E 1C5, Canada

1-800-463-3783

www.costco.ca

*faisant affaire au Québec sous
le nom Les Entrepôts Costco

MADE IN CHINA / FABRIQUÉ EN CHINE

***Venez découvrir tous nos produits
sur notre site Internet :***

Pour le Canada : www.vtechkids.ca/fr



© 2022 VTech Holdings Limited.
Tous droits réservés.
Imprimé en Chine.
91-004280-007 